



Flexus Q

Innovate the way you vape

GR

ΠΛΗΡΟΦΟΡΙΕΣ ΑΣΦΑΛΕΙΑΣ

Για την ασφάλεια και αποτελεματική χρήση του προϊόντος και των συνδετικών εξαρτημάτων του, σας παρατίνουμε να διմένετε όλες τις ακόλουθες οδηγίες, να τηρήσετε με προσοχή τις διάδικτες λειτουργίες ή σπάσεις που παρουσιάζονται στο παρόν εγχειρίδιο και να αντιτρέξετε στο φύλλοδιο που εμπεριέχεται στη συσκευασία του κάθε προϊόντος/εξαρτήματος χρωμάτα. Φύου το διαβάστε, αποθηκεύτε το σε ένα ασφαλές σημείο για να το συμβούλευτείξανα στο μέλλον αν χρειαστεί. Εσφαλμένη χρήση του προϊόντος μπορεί να οδηγήσει σε τραυματισμό ή σωματική βλάβη. Ο κατασκευαστής δεν αναλαμβάνει καμία ευθύνη για ζημιά που προκλήθηκε από εσφαλμένο χειρισμό πέρα από την κανονική χρήση η οποία αριθμείται στο παρόν εγχειρίδιο.

Το προϊόν απευθύνεται σε ενήλικους καπνιστές. Το προϊόν δεν συστήνεται σε μη-καπνιστές, σε νεαρά άτομα κάτιο από τη νόμιμη ηλικία, σε γυναίκες που εγκυούμενη ή θηλάζουν και σε δύο έχουν γενικότερα προβλήματα υγείας.

Κρατήστε το προϊόν μακριά από παιδιά και ανηλίκους ανά πάσα στιγμή.

ΕΞΑΡΤΗΜΑΤΑ ΤΟΥ ΠΡΟΪΟΝΤΟΣ

Πρόκειται για ένα προϊόν υψηλής τεχνολογίας και, και ο αποτυπωτής έχουν κατασκευαστεί ειδικά για το συγκεκριμένο προϊόν. Σας συστήνουμε να χρησιμοποιείτε πολεκτικά τα εξαρτήματα και τα αξεσουάρ που υποστηνόταν. Η χρήση εξαρτημάτων ή και αξεσουάρ που δεν είναι ειδικά κατασκευασμένα για το συγκεκριμένο προϊόν

SAFETY INFORMATION

For a safe and effective use of this product and its accessories, we advise you to read the following instructions in full, and to strictly observe the operating procedures indicated in this manual and refer to the leaflet contained in the packaging of the individual products / accessories. After reading, store it in a safe place for future reference. Incorrect handling of this product could possibly result in personal injury or physical damage. The manufacturer assumes no responsibility for any damage caused by mishandling that is beyond normal usage defined in this manual.

This product is intended for adult smokers. This product is not recommended for non-smokers, young people under the legal age, pregnant or breast feeding women and those experiencing general ill health.

Keep the product and its accessories out of reach of children and minors at all times!

COMPONENTS OF THE PRODUCT

This product is a high-tech product and its components such as the battery, the Type-C USB cable, and the tank / pod part have been specifically made for this product. We recommend the exclusive use of components and accessories indicated. Use

of components and / or accessories not specifically produced for this device may lead to a malfunction and / or damage to the product and to the cancellation of the warranty.

WARNINGS BEFORE USE

The use of an empty, dry or drained tank / pod can cause immediate damage to the internal resistance and the consequent cancellation of the warranty.

GENERAL WARNINGS AND LIMITATIONS OF USE

Do not bring your vape device into contact with water or other e-liquid. Avoid exposing the device to too low or too high temperatures (-5°C / 50°C).

Avoid using the product in overheated or excessively damp environments. Keep the product and its accessories away from heat sources. Use only Aspire original spare parts and accessories. Always discharge the battery completely before recharging.

Carefully read the composition of the e-liquid before use, and do not use the product if you are allergic to any of the components of the e-liquid. Do not use the product if you suffer from respiratory and / or cardiovascular system disorders. Do not use the product during pregnancy or lactation.

Do not ingest or swallow any part of the product or its accessories and do not try to open or tamper with the components of the product or its accessories.

The device does not need any flame to light it. In the case of anomalies, smell of burnt or abnormal deformation of one of the components of the device or its accessories, stop using it immediately and contact Customer Care.

Avoid direct contact of the e-liquid with the mouth which could happen if you inhale too strong and too frequently or if the tank / pod is too full.

Avoid any unauthorized operations that may damage the product. For an optimal performance of your vape device, it would be advisable to spend at least 30 seconds between one inhalation and the next.

We don't recommend using the product while charging.

Do not discard this product in the environment, and dispose of the product components at dedicated collection/disposal points.

SAFETY NOTE


To avoid misfiring, always ensure you either lock or switch off your device when it is not in use.

Especially when carrying your device in your pocket, bag or purse.

Contents:

- 1 * Flexus Q Device (700 mAh)
- 1 * Flexus Q Pod (2 ml)
- 1 * AF Mesh Coil 0.6Ω
- 1 * AF Mesh Coil 1.0Ω
- 1 * 3A Type-C Cable
- 1 * User Manual

Components View:

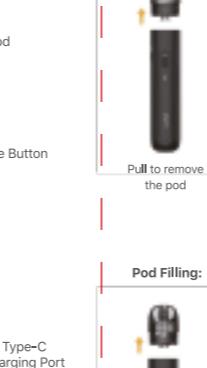

Coil parameters: 0.6Ω (15-18W) / 1.0Ω (12-15W)

Easy bottom fill
"Low, Mid, High" 3 wattage level adjustable

Charging: Type-C, 3A

	• When installing a new coil, let the pod/tank stand for 5 minutes after filling so the cotton can be saturated with e-liquid before use.
• Do not let the pod/tank become completely empty. Refill the pod/tank to avoid dry burning or damage to the coil.	
• Please remember that this device can be draw activated. In order not to damage the coil or to burn the cotton, do not inhale from the drip tip before filling the pod.	

Instructions:

Device	Status of indicator light & details
Connect/Disconnect the pod	Flash white 1 time
Recommended charge voltage	5V
LED light flashes green 20 times	Fully charged
LED light flashes red 3 times	Attach the USB cable
LED light flashes green 3 times	Unplug the USB cable

- Those who have an overactive thyroid gland or have a pheochromocytoma (a tumor of the adrenal gland that can affect high blood pressure);
- Those who have diabetes, as nicotine may affect your blood sugar levels.
- Those taking the following medication;
- Theophylline (to treat breathing problems)
- Ropinirole (to treat restless leg syndrome)
- Clozapine (to treat schizophrenia)


POSSIBLE SIDE EFFECTS:

If you inhale too much nicotine or use the product too much you may experience one or more of the following effects:

- Feeling faint;
- Nausea (feeling sick)
- Headache
- Coughing
- Irritation of the mouth or throat
- Dizziness
- Stomach discomfort
- Hiccups
- Nasal congestion
- Vomiting (being sick)
- Heart palpitations
- Abnormal heart rate

If you experience any of these side effects; including any possible side effects not listed in this leaflet, discontinue using the product, if the effect(s) continue after you stop use, consult your doctor or healthcare professional and bring this leaflet to their attention.

Pod Filling Child-proof:

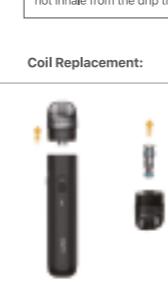

Coil Replacement:



IMPORTANT INFORMATION ABOUT USING NICOTINE CONTAINING E-LIQUIDS

Before using nicotine containing e-liquid the user should read the following information carefully.
• Do not use if you are allergic to nicotine or any of the other ingredients contained within the e-liquid (see manufacturer's label for full details).
NICOTINE CONTAINING E-LIQUID:
Do not use if you are allergic to nicotine or any of the other ingredients contained within the e-liquid (see manufacturer's label for full details).
WARNINGS AND PRECAUTIONS:

WARNINGS AND PRECAUTIONS:

Nicotine containing e-liquid are not recommended for:

- Non-smokers
- Young people under the legal age;
- Pregnant or breast-feeding women; as nicotine is known to cross the placenta and to be excreted in breast milk;
- Those experiencing general ill health; such as heart disease, stomach and duodenal ulcers, liver or kidney problems, long term throat disease or difficulty breathing due to bronchitis, emphysema or asthma;

Pod Filling:



Protection Features:

Vaping Over-Time Protection (6s)	The LED light will flash red and blue 10 times
Short Circuit Protection	The LED light will flash red and blue 3 times
Low Voltage Protection	The LED light will flash red 15 times
Overcharge Protection	The device will stop charging
Overheat Protection	The LED light will stay yellow for 3s and then the device will switch off
Over Voltage Protection	When charging is abnormal, the device will stop charging and vaping is not allowed.

ΣΗΜΑΝΤΙΚΕΣ ΠΛΗΡΟΦΟΡΙΕΣ ΓΙΑ ΤΗ ΧΡΗΣΗ ΥΓΡΩΝ ΑΝΑΠΛΗΡΩΣΗΣ ΜΕ ΝΙΚΟΤΙΝΗ

- Άτομα που πάσχουν από διαβήτη, καθώς η νικοτίνη μπορεί να επηρέασε τα επίπεδα σακχάρου στο αίμα.
- Άτομα με φαρμακευτική αγωγή:
- Theophylline (για θεραπεία προβλημάτων αναπνοής)
- Ropinirole (για θεραπεία συνδρόμου των ποιδιών)
- Clozapine (για θεραπεία σχιζοφρένειας)

ΥΓΡΑ ΑΝΑΠΛΗΡΩΣΗΣ ΜΕ ΝΙΚΟΤΙΝΗ:

- Όταν χρησιμοποιείστε μια νέα αντίσταση, αφήστε τον απομονωτή σε όρθια θέση για τέσσερα (5) λεπτά αφού θα πάρετε το νεό.
- Μην αφήνετε τη δεξιμενή να αδειάσει ενελώς.
- Ξανανεύστε την για να αποφύγετε το dry burning (τζύρια με υπολεύματα υγρού) ή τυχόν ζημιά στον απομονωτή.
- Παρακαλούμε να θυμάστε ότι η συγκεκριμένη συσκευή λειτουργεί αυτόματα με την εισιτηρίου, για να μην κάψετε το βαρύνα, μην εισπνεύσετε από το επιστροφή προτύπιο γεγονότα.

ΠΡΟΙΟΝΔΟΠΟΙΗΣΗΣ ΚΑΙ ΠΡΟΦΥΛΑΞΕΙΣ:

Τα υγρά αναπλήρωσης με νικοτίνη δεν συστήνονται σε:

- Μη-καπνιστές
- Νέοι κάτιο από νόμιμη ηλικία
- Αδιαθεσία στομάχου
- Λόγκας
- Ρινική συμφόρηση
- Τάση για εμέτο
- Τρέμουλο στο στήθος
- Αρρυθμία στους παλμούς της καρδιάς

Εάν νιώστε κάπιο από αυτές τις παρενέργειες, συμπεριλαμβανομένης και ποιασθήσατε αλλία που δεν αναφέρεται σε αυτό το φύλλο, σταματήστε την χρησιμοποίηση της συσκευής. Η απεκρίση λειτουργία δεν επιτρέπεται. Τραβήξτε έξω το νεό παρότο στη θέση του για να ξεκλειδώστε τη συσκευή. Το LED θα αναβοσθήσει μόλις 1 φορά.

Οδηγίες:</h3